


Panasonic Menu Select Programming Instructions


Models: PS638, PS840, PS870

PLEASE NOTE: For Panasonic Menu Select Ovens (PS638, PS840, PS870), the Menu password has changed. The old password, “CHUCK”, has been replaced by “1888”.


1. To choose or operate in one of the pre-programmed menus, press on the appropriate menu button, i.e. Menu1, Menu2, or Menu3. The READY light will come on after 5 minutes, or whenever the oven temperature is within five (5) degrees of the set point. This will allow the oven to stabilize at operation conditions (new belt speed and temperature) before baking.
2. To program any of the Menu buttons, first press the hidden button that's one-half inch (1/2") to the right of the ON/OFF button.

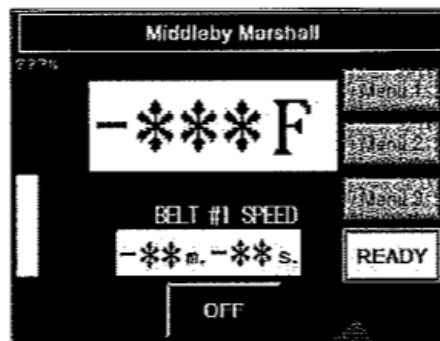

3. This will bring up a password screen. Press the center of the box underneath the word PASSWORD (box showing asterisks).

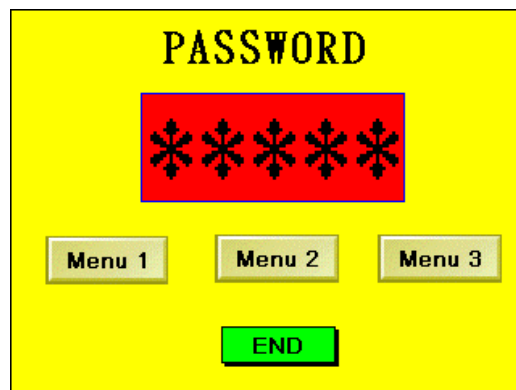


4. This brings up a keypad:

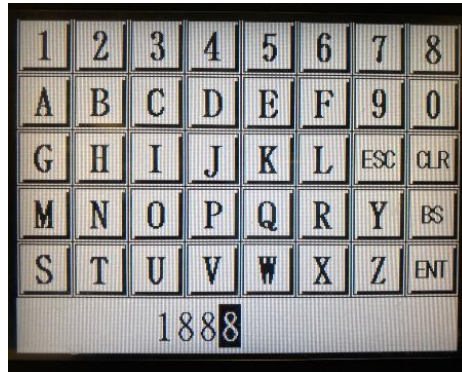


Enter the numbers 1888, then press the “ENT” button.

The block should now say 1888. Press “END”.

5. Select the menu button you which to change (TEMPERATURE or BELT TIME).
This will bring up its menu select screen.

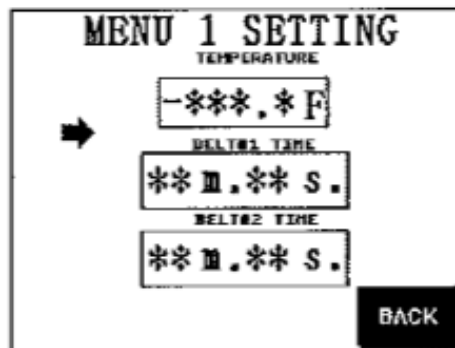

6. To set the temperature press on the temperature setting, opening the keypad for changing it. Enter the new temperature and press ENT.

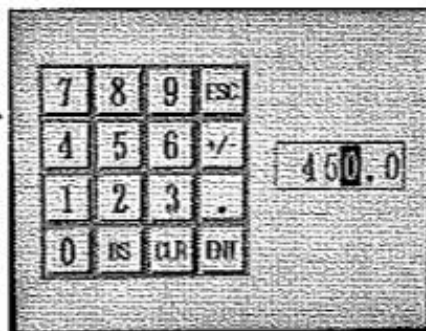

7. To change the belt time, press on the time parentheses minutes or seconds. This will bring up a keypad to change either of these values.
8. When satisfied with the new times and temps, press "BACK".
9. Your new selection is set. To change any of the other menus, go back through the password process.